



# Source Water Assessment Program (SWAP) Report For Wagon Wheel Coop. Corp

## What is SWAP?

The Source Water Assessment Program (SWAP), established under the federal Safe Drinking Water Act, requires every state to:

- ? Inventory land uses within the recharge areas of all public water supply sources;
- ? Assess the susceptibility of drinking water sources to contamination from these land uses; and
- ? Publicize the results to provide support for improved protection.

## SWAP and Water Quality

Susceptibility of a drinking water source does *not* imply poor water quality. Actual water quality is best reflected by the results of regular water tests.

Water suppliers protect drinking water by monitoring for more than 100 chemicals, treating water supplies, and using source protection measures to ensure that safe water is delivered to the tap.

Prepared by the  
Massachusetts Department of  
Environmental Protection,  
Bureau of Resource Protection,  
Drinking Water Program

Date Prepared:  
January 26, 2001

**Table 1: Public Water System (PWS) Information**

<b>PWS NAME</b>	WAGON WHEEL COOP. CORP.
<b>PWS Address</b>	13 BUCKBOARD PASS
<b>City/Town</b>	BROOKFIELD, MASSACHUSETTS
<b>PWS ID Number</b>	2045005
<b>Local Contact</b>	ROBERT ALLEN
<b>Phone Number</b>	(508) 867-7111

<b>Well Name</b>	<b>Source ID#</b>	<b>Zone I (in feet)</b>	<b>IWPA (in feet)</b>	<b>Source Susceptibility</b>
Well #1	2045004-01G	300	879	Moderate
Well #2	2045004-02G	300	879	Moderate
Well #3	2045004-03G	300	879	Moderate
Well #4	2045004-04G	228	559	Moderate
Well #5	2045004-05G	237	581	Moderate
Well #6	2045004-06G	234	574	Moderate

## Introduction

We are all concerned about the quality of the water we drink. Drinking water wells may be threatened by many potential sources of contamination, including septic systems, road salting, and improper disposal of hazardous materials. Citizens and local officials can work together to better protect these drinking water sources.

### Purpose of this report:

This report is a planning tool to support local and state efforts to improve water supply protection. By identifying land uses within water supply protection areas that may be potential sources of contamination the assessment helps focus protection efforts on appropriate best management practices (BMPs) and drinking water source protection measures. Department of Environmental Protection (DEP) staff are available to provide information about funding and other resources that may be available to your community.

### This report includes:

1. Description of the Water System
2. Discussion of Land Uses within Protection Areas
3. Recommendations for Protection
4. Attachments, including a Map of the Protection Areas

## 1. Description of the Water System

Wagon Wheel Mobile Home Park obtains its water supply from six wells located on the premises. Three of the six wells are dug wells and the remainder are drilled wells. Each well is in a cement casing with lid. Well #1, #2 and #3 each have a Zone I of 300 feet and an Interim Wellhead Protection Area (IWPA) of 879 feet. Well #4, #5 and #6 each have a Zone I of 228, 237 feet, and 234 feet, and IWPA s of 559 feet, 581 feet and 574, respectively. The IWPA provides an interim protection area for a water supply well when

### What is a Protection Area?

A well's water supply protection area is the land around the well where protection activities should be focused. Each well has a Zone I protective radius and an Interim Wellhead Protection Area (IWPA).

- **The Zone I** is the area that should be owned or controlled by the water supplier and limited to water supply activities.
- **The IWPA** is the larger area that is likely to contribute water to the well.

In many instances the IWPA does not include the entire land area that could contribute water to the well. Therefore, the well may be susceptible to contamination from activities outside of the IWPA that are not identified in this report.

### What is Susceptibility?

Susceptibility is a measure of a well's potential to become contaminated due to land uses and activities within the Zone I and Interim Wellhead Protection Area (IWPA).

the actual recharge area has not been delineated. The actual recharge area to the well may be significantly larger or smaller than the IWPA. The well is located in an aquifer with a high vulnerability to contamination due to the absence of hydrogeologic barriers that can prevent contaminant migration. Please refer to the attached map of the Zone I and IWPA. The well serving the facility has no treatment at this time. For current information on monitoring results and treatment and for a copy of the most recent Consumer Confidence Report, please contact the Public Water System contact person listed above in Table 1. Drinking water monitoring reporting data is also available on the web via EPA's Envirofacts website at [http://www.epa.gov/enviro/html/sdwis/sdwis\\_query.html](http://www.epa.gov/enviro/html/sdwis/sdwis_query.html).

## 2. Discussion of Land Uses in the Protection Areas

There are a number of land uses and activities within the drinking water supply protection areas that are potential sources of contamination.

#### Key issues include:

1. **Inappropriate Activities in Zone Is;**
2. **An Aboveground Storage Tank (AST) With Heating Oil; and**
3. **Septic system**

The overall ranking of susceptibility to contamination for the well is Moderate, based on the presence of only moderate threat land use or activity in the IWPA, as seen in Table 2.

1. **Zone Is** – Currently, the wells do not meet DEP's restrictions, which only allow water supply related activities in Zone Is. The facility's Zone Is contains Mobile Home units, road, ASTs, trash bin and parking areas. The public water supplier does not own and/or control all land encompassed by the Zone Is. Please note that systems not meeting DEP Zone I requirements must get DEP approval and address Zone I issues prior to increasing water use or modifying systems.

#### Recommendations:

- V Remove all non-water supply activities from the Zone I to comply with DEP's Zone I requirements.
- V Do not use road salt within the Zone I.

**Table 2: Table of Activities within the Water Supply Protection Areas**

Potential Contaminant Sources	Zone I	IWPA	Threat	Comments
Parking lot, driveways & access roads	All wells	All wells	Moderate	Limit road salt usage and provide drainage away from wells
Above ground storage tanks	All wells	All wells	Moderate	Tanks are on broken pavement, should be on an impervious surface
Septic System	Wells #1 & 2	Wells #1 & 2	Moderate	See septic systems brochure in the appendix
Propane tank	All wells	All wells	Low	Propane is a gas if released
Structures	All Wells	All Wells	-	Non-water supply structures in Zone I

\* For more information on Contaminants of Concern associated with individual facility types and land uses please see the SWAP Draft Land Use / Associated Contaminants Matrix on DEP's website - [www.state.ma.us/dep/brp/dws/](http://www.state.ma.us/dep/brp/dws/).

## Glossary

**Zone I:** The area closest to a well; a 100 to 400 foot radius proportional to the well's pumping rate. To determine your Zone I radius, refer to the attached map.

**IWPA:** A 400 foot to ½ mile radius around a public water supply well proportional to its pumping rate; the area DEP recommends for protection in the absence of a defined Zone I I. To determine IWPA radius, refer to the attached map.

**Zone II:** The primary recharge area defined by a hydrogeologic study.

**Aquifer:** An underground water-bearing layer of permeable material that will yield water in a usable quantity to a well.

**Hydrogeologic Barrier:** An underground layer of impermeable material that resists penetration by water.

**Recharge Area:** The surface area that contributes water to a well.

2. **Aboveground Storage Tank (AST)** – There are self contained ASTs located within the protection areas. If managed improperly, Aboveground Storage Tanks can be a potential source contamination due to leaks or spills of the chemicals they store.

### Recommendations:

- ✓ Aboveground storage tanks in your IWPA should be located on an impermeable surface, and also contained in an area large enough to hold the complete liquid volume, should a spill occur. The Department recommends that you provide 110% secondary containment for the AST.
- ✓ Upgrade all oil/hazardous material storage tanks to incorporate proper containment and safety practices. Any modifications to the AST must be accomplished in a manner consistent with Massachusetts's plumbing, building, and fire code requirements. Consult with the local fire department for any additional local code requirements regarding ASTs.

3. **Septic systems** – The septic systems are pumped on a regular basis. If a septic system fails or is not properly maintained it could be a potential source of microbial contamination. Improper disposal of household hazardous chemicals to septic systems is a potential source of contamination to the water supply.

### Recommendations:

- ✓ Staff and residents should be instructed on the proper disposal of spent chemicals; include residents, custodial staff, groundskeepers, and certified operator.
- ✓ Septic system components should be located, inspected, and maintained on a regular basis. Refer to the appendices for more information regarding septic systems.

Implementing the following recommendations will reduce the system's susceptibility to contamination.

## 3. Protection Recommendations

Implementing protection measures and best management practices (BMPs) will reduce the wells' susceptibility to contamination. Wagon Wheel Coop. Corp. should review and adopt the key recommendations above and the following:

### Priority Recommendations:

- ✓ Remove the trash bin located in the Zone I of well #5, immediately

### Zone I:

- ✓ Consider well relocation if Zone I threats cannot be mitigated.
- ✓ If Wagon Wheel Coop. Corp. intends to continue utilizing the structures in the Zone I, use BMPs and restrict activities that could pose a threat to the water supply.
- ✓ If it's not feasible to purchase privately owned land within the Zone I at this time, consider a conservation restriction that would prohibit potentially threatening activities or a right of first refusal to purchase the property.
- ✓ Do not use road salt within the Zone I.

### Training and Education:

- ✓ Train staff on proper hazardous material use, disposal, emergency response, and best management practices;

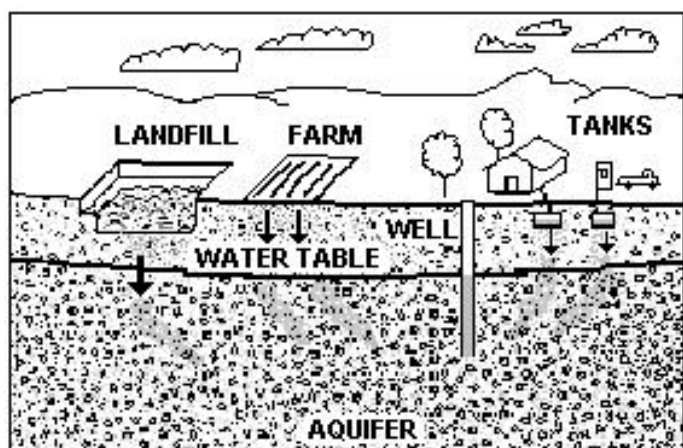


Figure 1: Example of how a well could become contaminated by different land uses and activities.

### For More Information:

Contact **Josephine Yemoh-Ndi** in DEP's **Worcester Office** at **(508) 792-7650 x 5030** for more information and for assistance in improving current protection measures.

More information relating to drinking water and source protection is available on the Drinking Water Program web site at:

[www.state.ma.us/dep/brp/dws/](http://www.state.ma.us/dep/brp/dws/)

### Additional Documents:

To help with source protection efforts, more information is available by request or online at [www.state.ma.us/dep/brp/dws/](http://www.state.ma.us/dep/brp/dws/), including:

1. Water Supply Protection Guidance Materials such as model regulations, Best Management Practice information, and general water supply protection information.
2. MA DEP SWAP Strategy
3. Land Use Pollution Potential Matrix
4. Draft Land/Associated Contaminants Matrix

Copies of this assessment have been provided to the public water supplier, town boards, and the local media.

include custodial staff, groundskeepers, and certified operator. Post labels as appropriate on raw materials and hazardous waste.

### Facilities Management:

- ✓ Implement standard operating procedures regarding proper storage, use and disposal of hazardous materials. To learn more, see the hazardous materials guidance manual at [www.state.ma.us/dep/bwp/dhm/dhmpubs.html](http://www.state.ma.us/dep/bwp/dhm/dhmpubs.html).
- ✓ Upgrade all oil/hazardous material storage tanks to incorporate proper containment and safety practices.
- ✓ For utility transformers that may contain PCBs, contact the utility to determine if PCBs have been replaced. If PCBs are present, request their immediate replacement. Keep the area near the transformer free of tree limbs that could endanger the transformer in a storm.

### Planning:

- ✓ Work with local officials in Brookfield to include the Wagon Wheel Coop. Corp. IWPA's in Aquifer Protection District Bylaws and to assist you in improving protection.
- ✓ Have a plan to address short-term water shortages and long-term water demands. Keep the phone number of a bottled water company readily available.
- ✓ Supplement the SWAP assessment with additional local information and incorporate it into water supply educational efforts. Use a land use inventory to assist in setting priorities, focusing inspections, and creating educational activities.

### Funding:

The Department's Wellhead Protection Grant Program provides funds to assist public water suppliers in addressing Wellhead protection through local projects. Protection recommendations discussed in this document may be eligible for funding under the "Wellhead Protection Grant Program". For additional information, please refer to the attached program fact sheet. Please note: each program year the Department posts a new Request for Response for the Grant program (RFR). Other funding opportunities are described in "Grant and Loan Programs: Opportunities for Watershed Protection, Planning and Implementation" at <http://www.state.ma.us/dep/brp/mf/files/glprgm.pdf>.

These recommendations are only part of your ongoing local drinking water source protection. Citizens and community officials should use this SWAP report to spur discussion of local drinking water protection measures.

## 4. Attachments

- Map of the Public Water Supply (PWS) Protection Area.
- Recommended Source Protection Measures Factsheet
- Your Septic System Brochure
- Wellhead Protection Grant Program Fact Sheet